


LIFTGATE UPPER TRIM REMOVAL/INSTALLATION

B3E091768930W02

1. Pull the liftgate upper trim outward, then detach the clips A, B and the locator pin C from the liftgate.

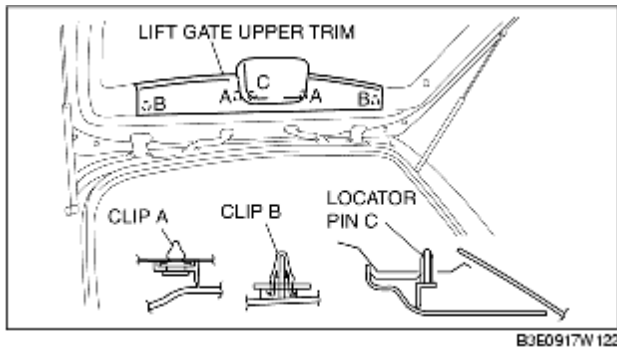

2. Remove the liftgate upper trim.
3. Install in the reverse order of removal.