



LIFTGATE SIDE TRIM REMOVAL/INSTALLATION

B3E091768930W03

1. Remove the liftgate upper trim. (See [LIFTGATE UPPER TRIM REMOVAL/INSTALLATION](#).)
2. Pull the point A of the strap hanger as shown in the figure.

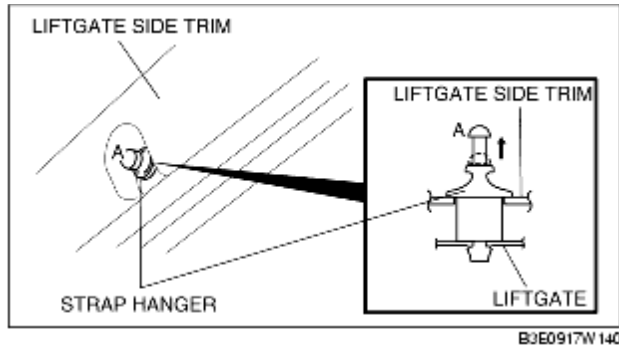

3. Remove the strap hanger.
4. Pull the liftgate side trim outward and detach clip A, locator pin B.

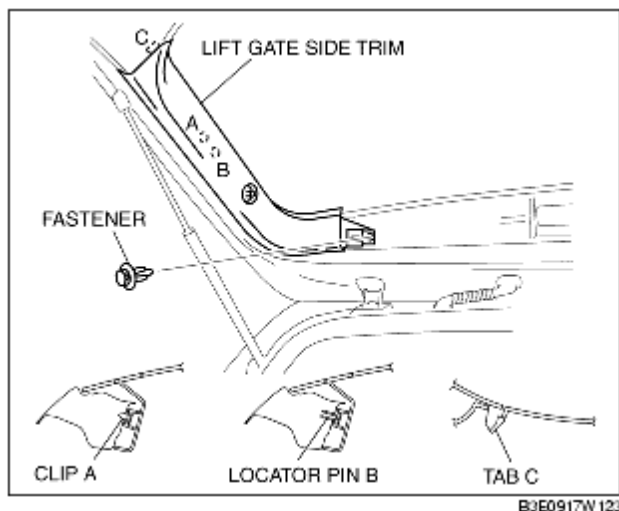

5. Detach the tab C and remove the liftgate side trim.
6. Install in the reverse order of removal.