


LIFTGATE LOWER TRIM REMOVAL/INSTALLATION

B3E091768930W04

1. Remove the liftgate upper trim. (See [LIFTGATE UPPER TRIM REMOVAL/INSTALLATION](#).)
2. Remove the liftgate side trim. (See [LIFTGATE SIDE TRIM REMOVAL/INSTALLATION](#).)
3. While supporting at point A, pull the recess in the direction of the arrow and remove it.

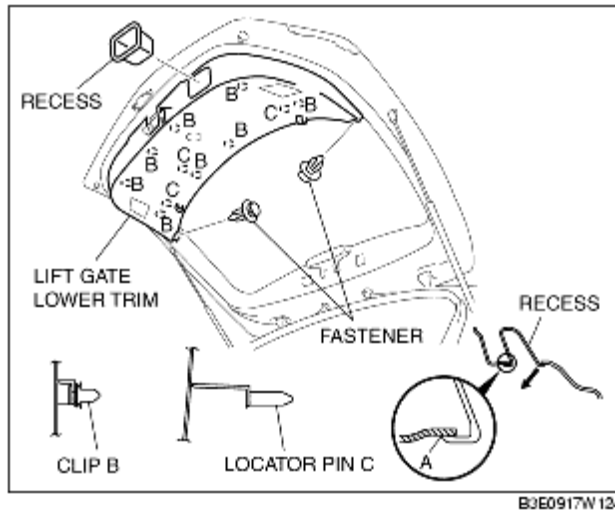

4. Remove the fasteners.
5. Pull the liftgate lower trim outward, then detach clips B and locator pins C from the liftgate.
6. Remove the liftgate lower trim.
7. Install in the reverse order of removal.