



ASSIST HANDLE REMOVAL/INSTALLATION

B3E091769440W01

1. Insert a flathead screwdriver into the assist handle notch and remove the assist handle cover.

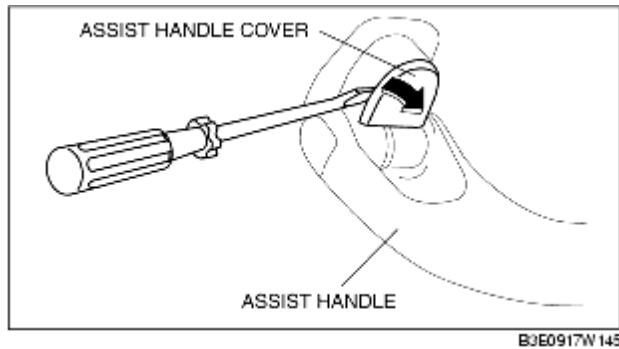

2. Pull the assist handle outward and remove it.

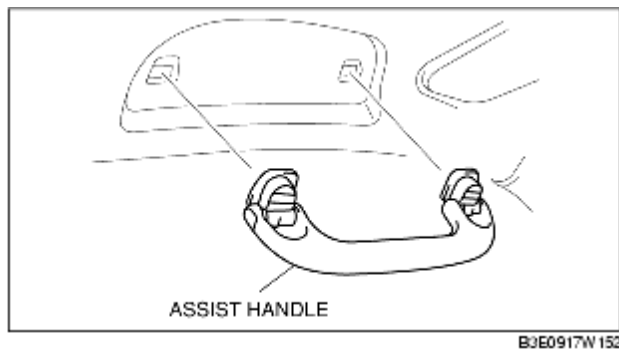

3. Install in the reverse order of removal.