


DISCHARGE HEADLIGHT CONTROL MODULE CONSTRUCTION/OPERATION

B3E000001052T11

Warning

- Incorrect servicing of the discharge headlights could result in electrical shock. Before servicing the discharge headlights, always refer to the discharge headlight service warnings. (See Mazda 3 Workshop Manual (1780-1*-03G).)
- Built into the headlight and installed on the headlight lower side.

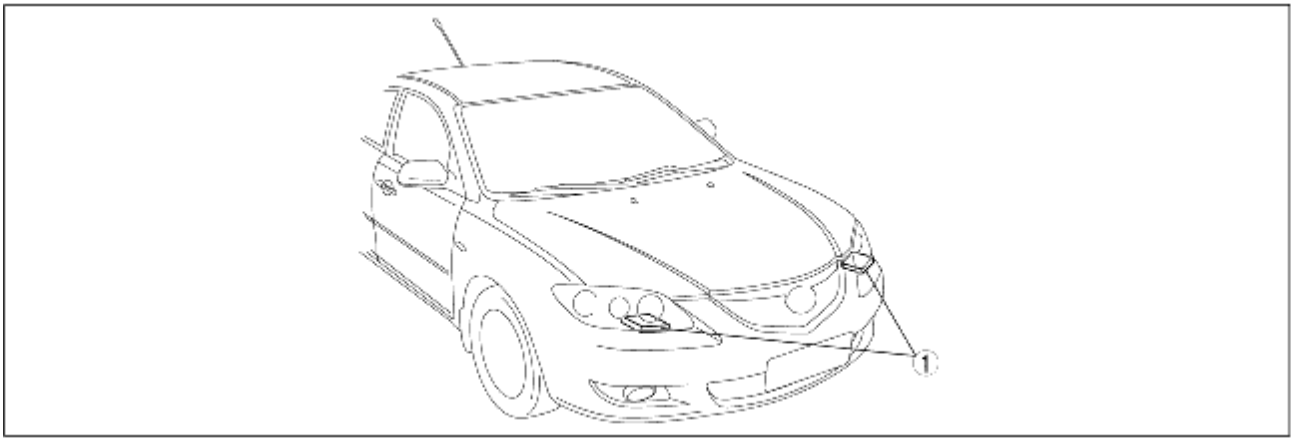

B3E09 18T 104

1	Discharge headlight control module
---	------------------------------------

- Switches the direct current from the battery to alternating current (**25,000 V**) and optimally controls the current supply output to the bulb.