


AUTO LIGHT SENSOR OPERATION

B3E091801052T17

- Installed on the underside of the rearview mirror (windshield center) and integrated with the rain sensor as a single unit.

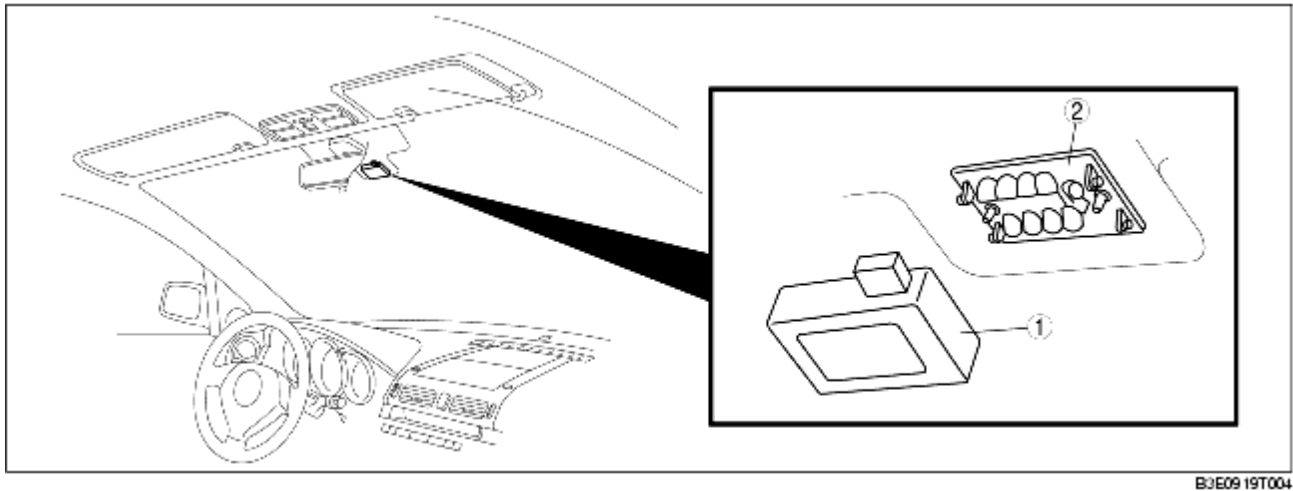

B3E09 19T004

1	Lens sensor
2	Auto-light sensor

- The upward and forward illumination level sensors which detect the level of illumination above and in front of the vehicle respectively are built-in.

Function Description

Illumination level adjustment function

- The illumination level sensitivity can be switched between two levels using the WDS or equivalent.

On-board diagnostic function

- If the voltage input to the auto-light sensor is not within the operational voltage (**approx. 9-16 V**), the PJB is informed of the malfunction and a PJB DTC is detected.