


DRL SYSTEM WIRING DIAGRAM

B3E091801056T01

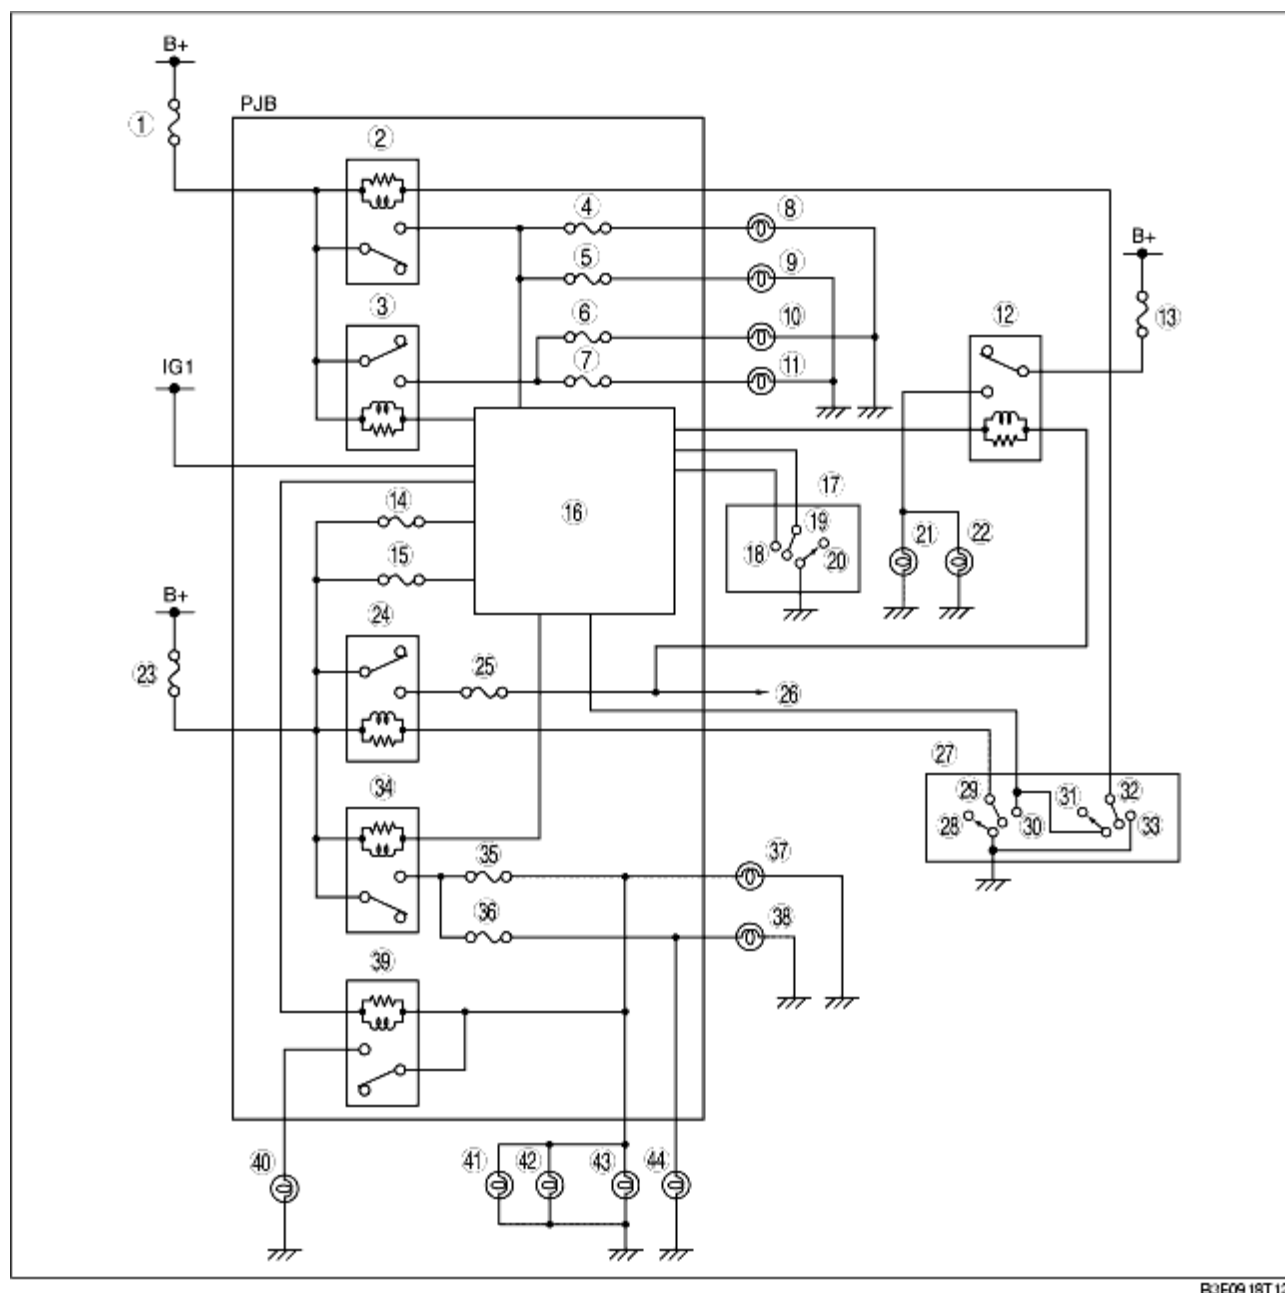

B3E09 18T 120

1	Head 40 A fuse
2	Headlight relay HI
3	Headlight relay LO
4	Head HI L 10 A fuse
5	Head HI R 10 A fuse
6	Head LO L 15 A fuse
7	Head LO R 15 A fuse

8	Headlight HI (LH)
9	Headlight HI (RH)
10	Headlight LO (LH)
11	Headlight LO (RH)
12	Front fog light relay
13	Fog 15 A fuse
14	Hazard 15 A fuse
15	CPU PWR 10 A fuse
16	Microcomputer
17	Front and rear fog light switch
18	Rear fog
19	Front fog
20	Off
21	Front fog light (LH)
22	Front fog light (RH)
23	BTN 40 A fuse
24	TNS relay
25	Illumi 7.5 A fuse
26	Instrument cluster
27	Light switch
28	Off
29	TNS
30	Headlight
31	Lo
32	Hi
33	Flash-to-pass
34	RUN/L relay
35	Tail R 7.5 A fuse
36	Tail L 7.5 A fuse
37	Parking light (RH)
38	Parking light (LH)
39	Rear fog light relay
40	Rear fog light
41	License plate light (LH)
42	License plate light (RH)
43	Taillight RH
44	Taillight LH