


## MAP LIGHT REMOVAL/INSTALLATION


---

B3E091801058W01

1. Disconnect the negative battery cable.
2. Insert a tape-wrapped flathead screwdriver into the gap between the headliner and the map light.
3. Press the tab and remove the map light.

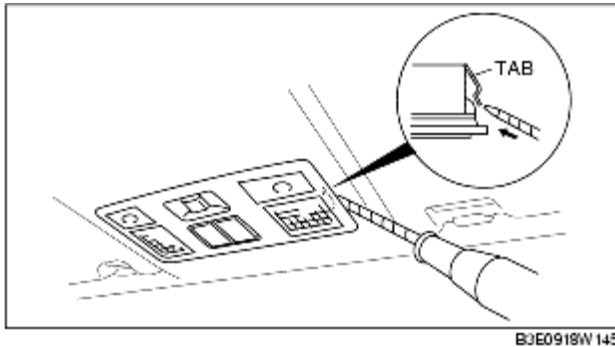

4. Disconnect the map light connector.

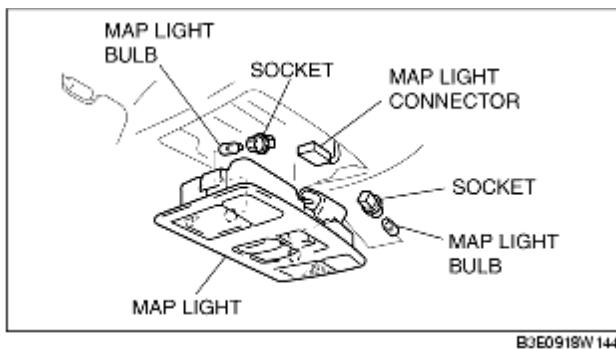

5. Remove the socket, then remove the map light bulb.
6. Install in the reverse order of removal.