


# INTERIOR LIGHT INSPECTION

B3E091801058W04

1. Verify that the continuity between the interior light terminals is as indicated in the table.

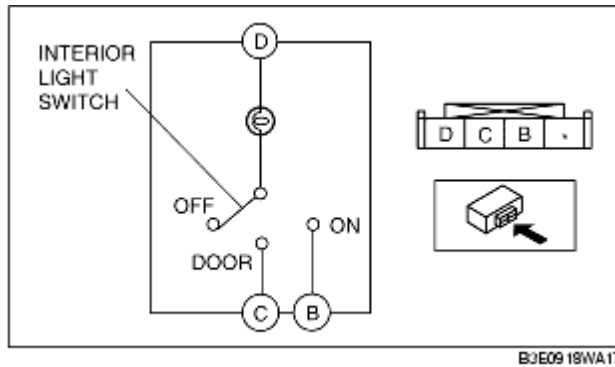

- If not as indicated in the table, replace the interior light.

Switch position	Terminal		
	B	C	D
ON	○	○ Ⓢ	○
DOOR		○ Ⓢ	○
OFF			

B3E0918W154