


BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION

B3E091817640W01

1. Disconnect the negative battery cable.
2. Remove the under cover.
3. Disconnect the back-up light switch connector and remove the back-up light switch.

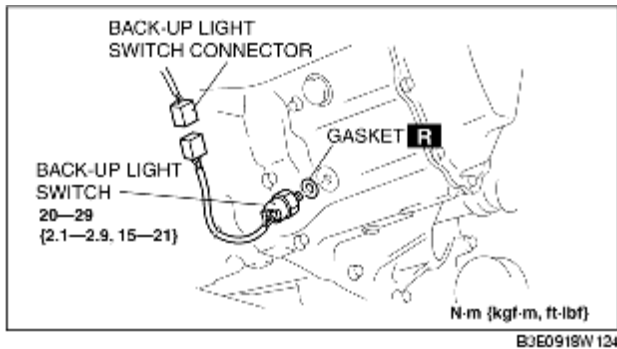

4. Install in the reverse order of removal.