


HEADLIGHT BULB REMOVAL/INSTALLATION

B3E091851030W02

Low-beam

Halogen type

1. Disconnect the negative battery cable.
2. Disconnect the connector.

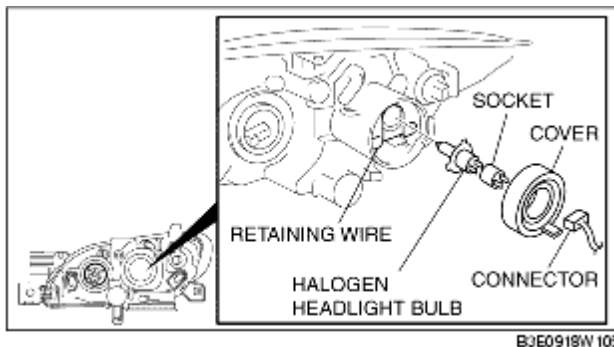

Caution

- A halogen bulb generates extremely high heat when it is illuminated. If the surface of the bulb is soiled, excessive heat will build up and the life of the bulb will be shortened. When replacing the bulb, hold the metal flange, not the glass.

3. Remove the cover.
4. Remove the socket, then remove the headlight bulb.
5. Install in the reverse order of removal.

Discharge type

Warning

- Incorrect servicing of the discharge headlights could result in electrical shock. Before servicing the discharge headlights, always refer to the discharge headlight service warnings. (See [DISCHARGE HEADLIGHT SERVICE WARNINGS](#).)

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/INSTALLATION](#).)
3. Remove the front combination light. (See [FRONT COMBINATION LIGHT REMOVAL/INSTALLATION](#).)
4. Remove the cover.


Caution

- The bulb generates extremely high heat when it is illuminated. If the surface of the bulb is soiled, excessive heat will build up and the life of the bulb will be shortened. When replacing the bulb, hold the metal flange, not the glass.

5. Remove the connector, then remove the discharge headlight bulb.
6. Install in the reverse order of removal.

High-beam

1. Disconnect the negative battery cable.
2. Remove the fresh-air duct cover. (LH) (Z6) (See [INTAKE-AIR SYSTEM REMOVAL/INSTALLATION \[ZJ, Z6\]](#).)
3. Disconnect the connector.

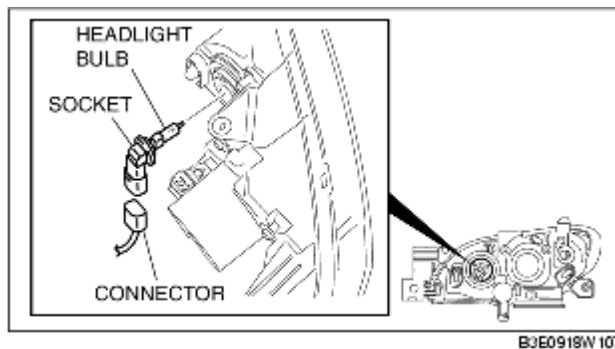**Caution**

- A halogen bulb generates extremely high heat when it is illuminated. If the surface of the bulb is soiled, excessive heat will build up and the life of the bulb will be shortened. When replacing the bulb, hold the metal flange, not the glass.

4. Remove the socket, then remove the headlight bulb.
5. Install in the reverse order of removal.