

# DISCHARGE HEADLIGHT CONTROL MODULE REMOVAL/INSTALLATION


---

B3E091851030W03

## Warning

- Incorrect servicing of the discharge headlights could result in electrical shock. Before servicing the discharge headlights, always refer to the discharge headlight service warnings. (See [DISCHARGE HEADLIGHT SERVICE WARNINGS](#).)

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/INSTALLATION](#).)
3. Remove the front combination light. (See [FRONT COMBINATION LIGHT REMOVAL/INSTALLATION](#).)
4. Remove screws.

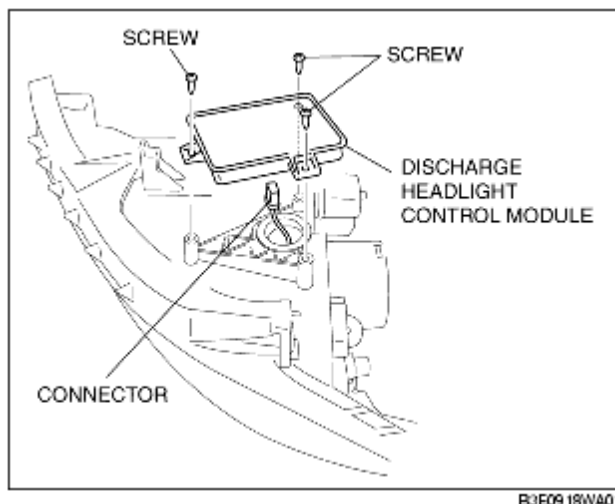

B3E0918WA01

5. Disconnect the connector.
6. Remove the discharge headlight control module.
7. Install in the reverse order of removal.