


# AUTO LEVELING CONTROL MODULE REMOVAL/INSTALLATION

---

B3E091851031W02

1. Disconnect the negative battery cable.
2. Remove the glove compartment. (See [GLOVE COMPARTMENT REMOVAL/INSTALLATION](#).)
3. Disconnect the auto leveling control module connector.

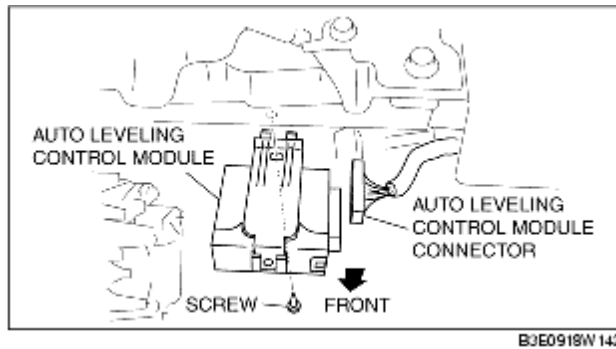

4. Remove the screw, then remove the auto leveling control module.
5. Install in the reverse order of removal.