


PARKING LIGHT BULB REMOVAL/INSTALLATION

B3E091851040W01

1. Disconnect the negative battery cable.
2. Disconnect the connector.

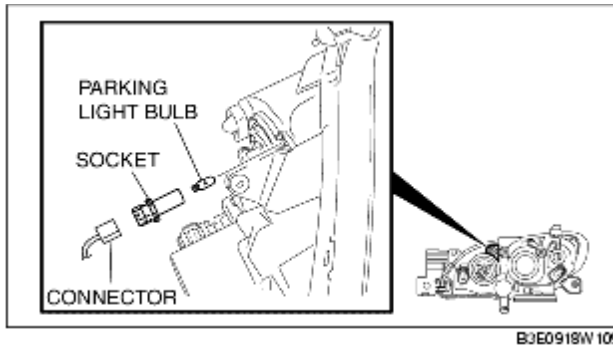

3. Remove the socket, then remove the parking light bulb.
4. Install in the reverse order of removal.