


AUTO LIGHT ILLUMINATION LEVEL SETTING

B3E091851050W01

1. Connect the WDS or equivalent to the DLC-2 (16-pin).

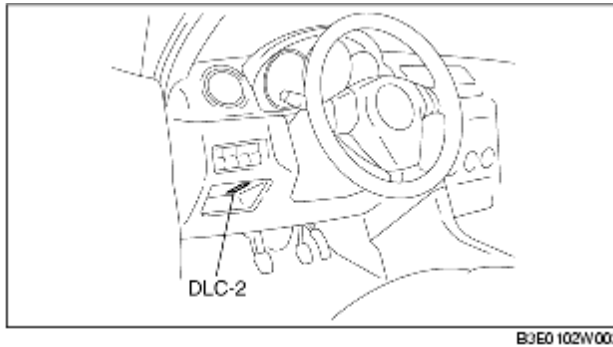

2. Select "Module programming" from the menu.
3. Select "Programmable Parameters".
4. Select "Exterior Lighting".
5. Select "Standard" or "Low" on the WDS or equivalent to set the illumination level.