


FRONT TURN LIGHT BULB REMOVAL/INSTALLATION

B3E091851050W02

1. Disconnect the negative battery cable.
2. Remove the fasteners and slightly bend back the mudguard.
3. Disconnect the connector.

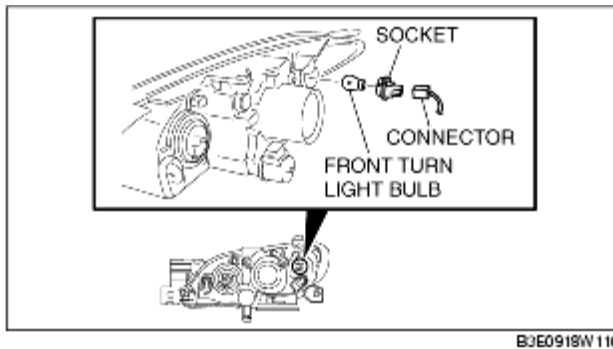

4. Remove the socket, then remove the front turn light bulb.
5. Install in the reverse order of removal.