


# FRONT COMBINATION LIGHT REMOVAL/INSTALLATION

B3E091851060W01

## Warning

- Incorrect servicing of the discharge headlights could result in electrical shock. Before servicing the discharge headlights, always refer to the discharge headlight service warnings. (See [DISCHARGE HEADLIGHT SERVICE WARNINGS](#).)

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/INSTALLATION](#).)
3. Remove in the order indicated in the table.

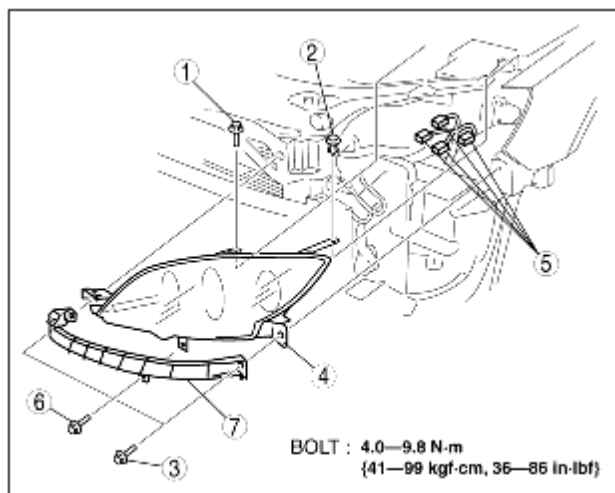

B3E0918W102

1	Bolt A
2	Fastener
3	Bolt B
4	Front combination light
5	Connector
6	Bolt C
7	Cover

4. Install in the reverse order of removal.
5. Adjust the headlight aiming. (See [HEADLIGHT AIMING](#))