


# FRONT SIDE TURN LIGHT REMOVAL/INSTALLATION

---

B3E091851121W01

1. Disconnect the negative battery cable.
2. Move the front side turn light in the direction of the arrow (1) and detach the tab.

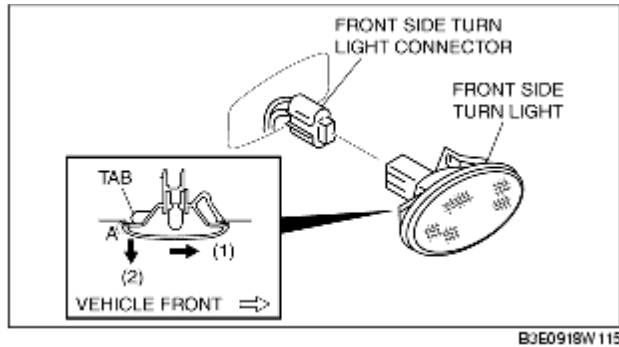

3. Pull area A of the front side turn light in the direction of the arrow (2) and remove the front side turn light.
4. Disconnect the front side turn light connector.
5. Install in the reverse order of removal.