


REAR COMBINATION LIGHT BULB REMOVAL/INSTALLATION

B3E091851150W02

5HB

1. Disconnect the negative battery cable.
2. Remove the service hole cover.

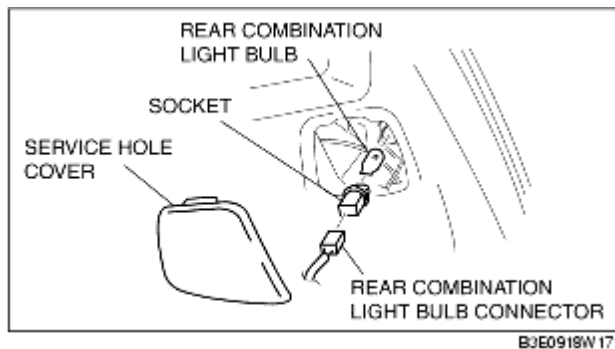

3. Disconnect the rear combination light bulb connector.
4. Remove the socket.
5. Remove the rear combination light bulb.
6. Install in the reverse order of removal.