



## LICENSE PLATE LIGHT REMOVAL/INSTALLATION

B3E091851270W01

1. Disconnect the negative battery cable.
2. Remove the lens, then remove the license plate light bulb.

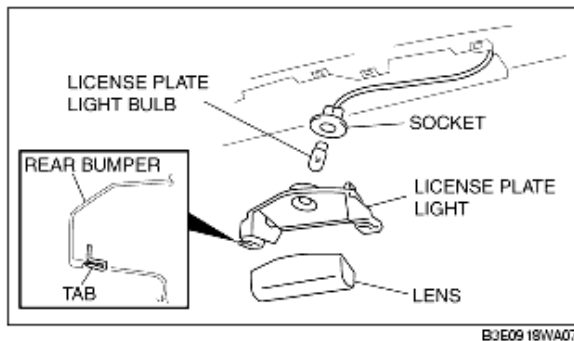

3. Remove the license plate light from the rear bumper.
4. Remove the trunk end trim. (See [TRUNK END TRIM REMOVAL/INSTALLATION.](#))
5. Remove the fasteners and slightly bend back the trunk side trim. (RH)
6. Remove the fasteners and slightly bend back the trunk side trim. (LH) (4SD)
7. Remove the service hole cover. (LH) (5HB)
8. Remove the rear combination light. (See [REAR COMBINATION LIGHT REMOVAL/INSTALLATION.](#))
9. Disconnect the license plate light connector.

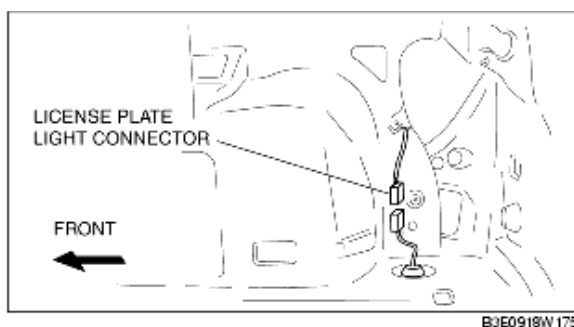

10. Remove the rear bumper. (See [REAR BUMPER REMOVAL/INSTALLATION.](#))
11. Detach the clips from the rear bumper.

12. Remove the license plate light harness and tape.

13. Install in the reverse order of removal.