

INTERIOR LIGHTING SYSTEM CONSTRUCTION

B3E091851311T01

• The map light is located on the roof, towards the front. There are two types of map lights: one for vehicles with sunroofs and one for vehicles without.

• The map and interior lights settings are controlled by the interior light control system.

×: Equipped

-: Not equipped

Type	Installation position	Interior light control system	Roof
Map light	Front	×	Sunroof
Map light		×	Normal roof
Interior light	Rear	×	Both
Trunk compartment light	Trunk compartment	-	
Cargo compartment light	Cargo compartment	-	