

 
ROOM LIGHT CONTROL SYSTEM OPERATION

B3E091851311T03

Conditions before operation (Conditions which must be satisfied)	Operation condition	Interior light		Cancel condition (When any condition satisfied)
		Illumination time	Brightness	
<ul style="list-style-type: none"> • Turn the ignition switch to the LOCK or ACC position. • All doors are closed. (All latch switches are off.) 	Any door open. (Any latch switch is on.)	Approx.5 min	100 %	<ul style="list-style-type: none"> • All doors are closed except liftgate. (Any latch switch is off except liftgate.) • After illumination time.*¹
<ul style="list-style-type: none"> • Key extracted from steering lock. (Key reminder switch is off.) • All doors are closed. (All latch switches are off.) • Driver's door lock knob is locked. (Door lock-link switch is in lock position.) 	Driver's door lock knob is unlocked. (Door lock-link switch is in unlock position.)	Approx.30 s	60 %	<ul style="list-style-type: none"> • Turn the ignition switch to the ON position. • Any door open except liftgate. (Any latch switch is on except liftgate.) • Driver's door lock knob is locked. (Door lock-link switch is in lock position.) • After illumination time.*¹
<ul style="list-style-type: none"> • Key inserted into steering lock. (Key reminder switch is on.) • All doors are closed. (All latch switches are off.) 	Key extracted from steering lock. (Key reminder switch is off.)	Approx.15 s	60 %	<ul style="list-style-type: none"> • Turn the ignition switch to the ON position. • Driver's door lock knob is locked. (Door lock-link switch is in lock position.) • After illumination time.*¹
<ul style="list-style-type: none"> • Turn the ignition switch to the LOCK or ACC position. • Any door open. (Any latch switch is on.) • Driver's door lock knob is unlocked. (Door lock-link switch is in unlock position.) 	All doors are closed. (All latch switches are off.)	Approx.15 s	60 %	<ul style="list-style-type: none"> • Turn the ignition switch to the ON position. • Any door open except liftgate. (Any latch switch is on except liftgate.) • Driver's door lock knob is locked. (Door lock-link switch is in lock position.) • After illumination time.*¹

*1 : After interior light is turned off according to this cancel condition, the light will illuminate again when either of the following conditions are satisfied:

- After all doors are closed, then any door is reopened. (After all door switches are off, any door switch is on.)
- After all doors are closed, then ignition switch is at the ON position. (After all door switches are off, IG on.)



file:///R:/My%20Websites/Files/001%20NEW/Mazda%203%20BK/srvc/html/B3E09... 15/02/2019