


# INBOARD LIGHT REMOVAL/INSTALLATION

B3E091851380W01

1. Disconnect the negative battery cable.
2. Remove the trunk lid trim. (4SD) (See [TRUNK LID TRIM REMOVAL/INSTALLATION](#).)
3. Remove the service hole cover. (5HB)
4. Remove in the order indicated in the table.

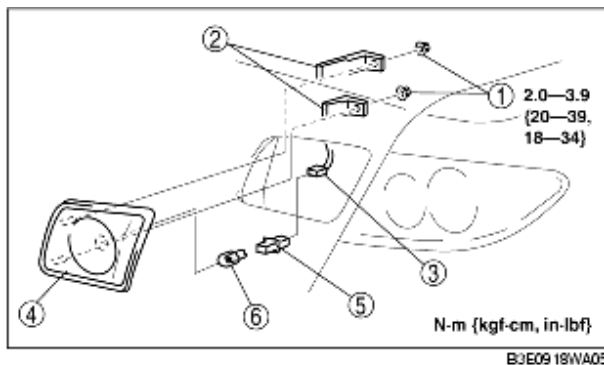


1	Nut
2	Bracket
3	Connector
4	Inboard light (RH)/Rear fog light (LH) (See <a href="#">Inboard Light Installation Note</a> .)
5	Socket
6	Back-up light bulb (RH)/Rear fog light bulb (LH)

5. Install in the reverse order of removal.

## Inboard Light Installation Note

1. Insert the inboard light into the trunk lid (liftgate) as shown in the figure, then pivot it inward and fix in place.

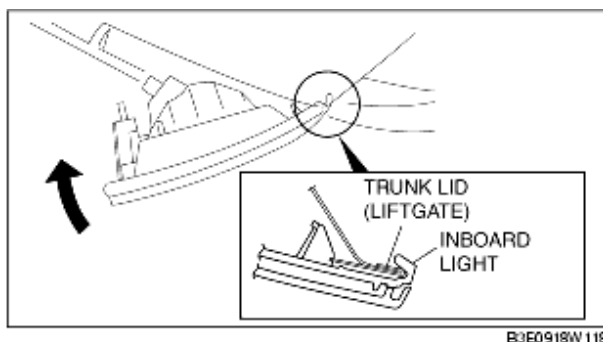

2. Push the bracket onto the trunk lid (liftgate) as shown in the figure and install.

