


FRONT FOG LIGHT AIMING

B3E091851680W02

1. Adjust the tire pressure to the specification.
2. Position the unloaded vehicle on a flat, level surface.
3. Seat one person in the driver's seat.
4. Position the vehicle straight ahead and perpendicular to a white screen.
5. Set the fog lights **3 m {9.8 ft}** from the white screen.

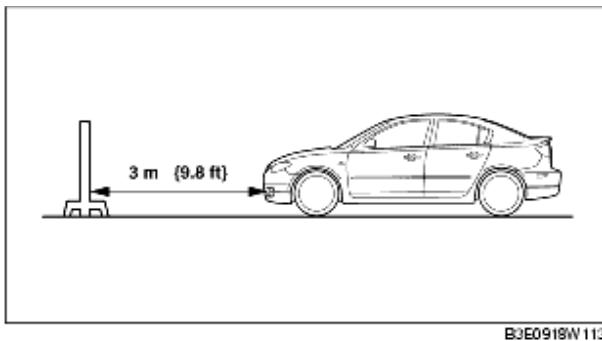

6. Place an object in front of the fog light not being adjusted to block its light beam.
7. Start the engine so that the battery remains charged.
8. Turn the front fog lights on.
9. Loosen the screw and the adjusting bolt, move the front fog light in the direction of the arrows, and adjust the front fog light beam to the position shown in the figure.
10. Tighten the adjusting bolt, then tighten the screw.

