


## IGNITION KEY ILLUMINATION BULB REMOVAL/INSTALLATION

---

B3E091860231W01

1. Disconnect the negative battery cable.
2. Remove the column cover. (See [COLUMN COVER REMOVAL/INSTALLATION](#).)
3. Remove the ignition key illumination bulb.

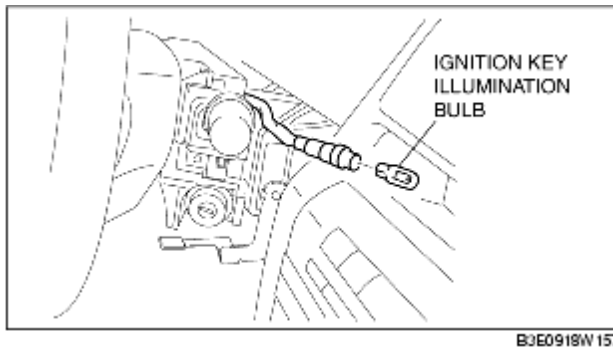

4. Install in the reverse order of removal.