


LIGHT SWITCH REMOVAL/INSTALLATION

B3E091866121W01

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - (1) Front scuff plate (Driver's side) (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (2) Front side trim (Driver's side) (See [FRONT SIDE TRIM REMOVAL/INSTALLATION.](#))
 - (3) Lower panel (See [LOWER PANEL REMOVAL/INSTALLATION.](#))
 - (4) Column cover (See [COLUMN COVER REMOVAL/INSTALLATION.](#))
3. Disconnect the light switch connector.

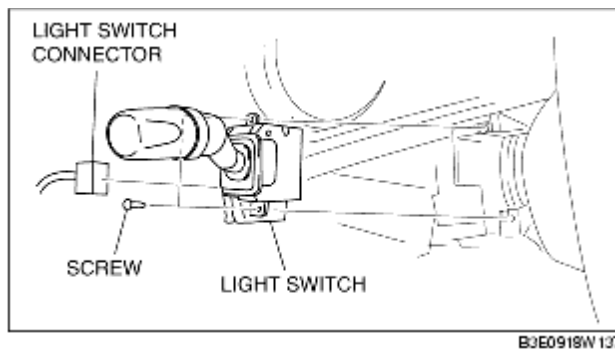

4. Remove the screws, then remove the light switch.
5. Install in the reverse order of removal.