


LIGHT SWITCH INSPECTION

B3E091866121W02

1. Verify that the continuity between the light switch terminals is as indicated in the table.

Headlight Switch

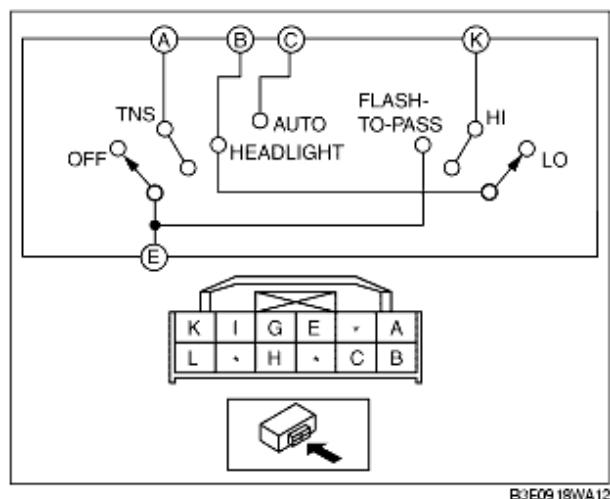

B3E0918WA12


- If not as indicated in the table, replace the light switch.

○—○ : Continuity

Switch position			Terminal				
Light	Dimmer	Flash-to-pass	A	B	C	E	K
OFF	—	OFF					
		ON		○—○		○—○	○—○
TNS	—	OFF	○—○	○—○		○—○	
		ON	○—○	○—○		○—○	○—○
Head light	LO	OFF	○—○	○—○		○—○	
		ON	○—○	○—○		○—○	○—○
	HI	—	○—○	○—○		○—○	○—○
Auto	LO	OFF	○—○	○—○	○—○	○—○	
		ON	○—○	○—○	○—○	○—○	○—○
	HI	—	○—○	○—○	○—○	○—○	○—○

B3E0918W139

Turn Switch

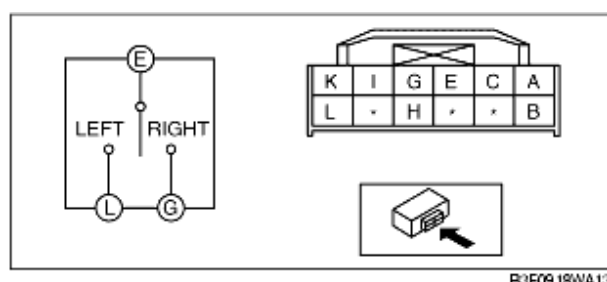

B3E0918WA13

