


HEADLIGHT LEVELING SWITCH REMOVAL/INSTALLATION

B3E0918666F0W01

1. Disconnect the negative battery cable.
2. Detach the bonnet release lever from the lower panel. (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[L.H.D.\]](#).) (See [BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION \[R.H.D.\]](#).)
3. Remove the front scuff plate. (Driver's side) (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
4. Remove the front side trim. (Driver's side) (See [FRONT SIDE TRIM REMOVAL/INSTALLATION](#).)
5. Remove the lower panel. (See [LOWER PANEL REMOVAL/INSTALLATION](#).)
6. Remove the headlight leveling switch

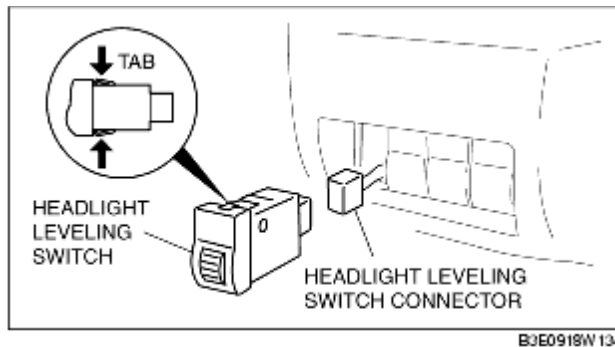

7. Disconnect the headlight leveling switch connector.
8. Install in the reverse order of removal.