


# HEADLIGHT LEVELING SWITCH INSPECTION

B3E0918666F0W02

1. Verify that continuity between the headlight leveling switch terminals is as indicated in the table.

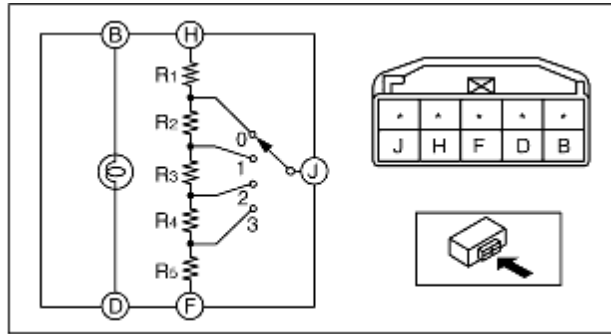

B3E0918WA11

- If not as indicated in the table, replace the headlight leveling switch.

○—○ : Resistance    ○—○ : Bulb

Switch position	Terminal				
	B	D	H	J	F
0	○—○	○—○	○—R <sub>1</sub> —○	○—R <sub>2</sub> —R <sub>3</sub> —R <sub>4</sub> —R <sub>5</sub> —○	
1	○—○	○—○	○—R <sub>1</sub> —R <sub>2</sub> —○	○—R <sub>3</sub> —R <sub>4</sub> —R <sub>5</sub> —○	
2	○—○	○—○	○—R <sub>1</sub> —R <sub>2</sub> —R <sub>3</sub> —○	○—R <sub>4</sub> —R <sub>5</sub> —○	
3	○—○	○—○	○—R <sub>1</sub> —R <sub>2</sub> —R <sub>3</sub> —R <sub>4</sub> —○	○—R <sub>5</sub> —○	

R<sub>1</sub> : 715 ohms    R<sub>2</sub> : 715 ohms    R<sub>3</sub> : 261 ohms  
R<sub>4</sub> : 604 ohms    R<sub>5</sub> : 715 ohms

B3E0918W 136