


WASHER FLUID-LEVEL SENSOR REMOVAL/INSTALLATION

B3E091966122W01

1. Disconnect the negative battery cable.
2. Remove the washer tank. (See [WASHER TANK REMOVAL/INSTALLATION](#))
3. Disconnect the connector.

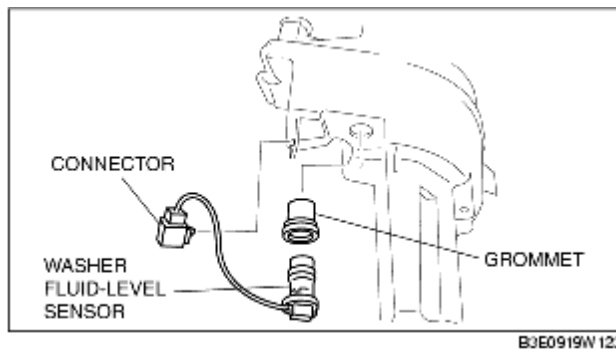

4. Remove the washer fluid-level sensor.
5. Remove the grommet.
6. Install in the reverse order of removal.