


WASHER FLUID-LEVEL SENSOR INSPECTION

B3E091966122W02

1. Disconnect the negative battery cable.
2. Inspect for continuity between the washer fluid-level sensor terminals using an ohmmeter.

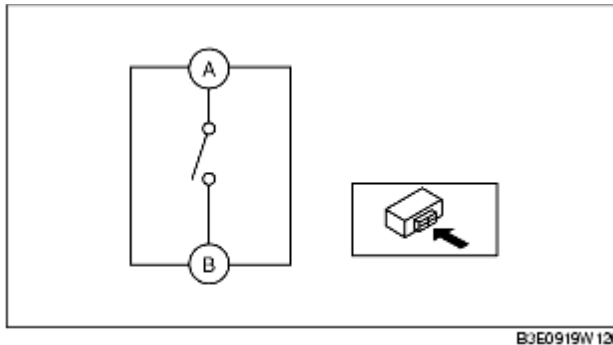

B3E0919W 126

- If not as specified, replace the washer fluid-level sensor.

Fluid level	Terminal	
	A	B
Above low		
Below low	○	○

B3E0919W 144