
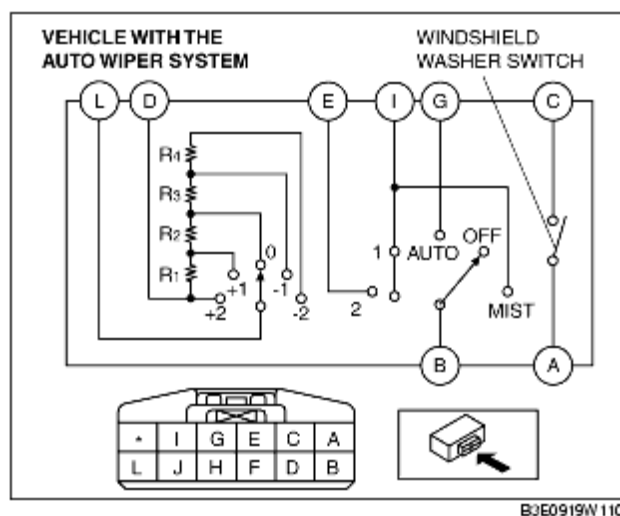


WINDSHIELD WIPER AND WASHER SWITCH INSPECTION

B3E091966122W04

1. Verify that the continuity between the windshield wiper and washer switch is as indicated in the table.

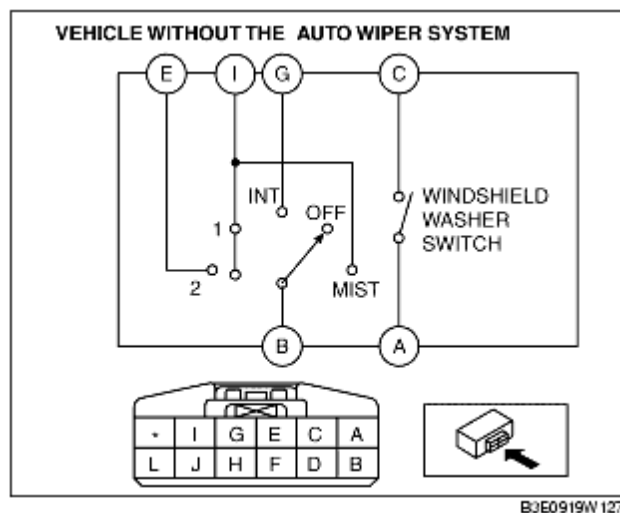

- If not as indicated in the table, replace the wiper and washer switch.

○—○ : Continuity

Switch position	Mist	Terminal					
		A	B	C	E	G	I
Windshield wiper switch	OFF						
	AUTO (INT)						
Windshield washer switch	ON						

B3E0919W 128

VEHICLE WITH THE AUTO WIPER SYSTEM

○—W—○ : Resistance

Switch position		Terminal	
		D	L
+	2	○	○
	1	○	○ R ₁
	0	○	○ R ₁ R ₂
-	1	○	○ R ₁ R ₂ R ₃
	2	○	○ R ₁ R ₂ R ₃ R ₄

R₁ : 228—252 ohms R₂ : 228—252 ohmsR₃ : 228—252 ohms R₄ : 228—252 ohms

B3E0919W111