


HEADLIGHT CLEANER MOTOR REMOVAL/INSTALLATION

B3E091966122W06

1. Disconnect the negative battery cable.
2. Remove the washer tank. (See [WASHER TANK REMOVAL/INSTALLATION](#).)
3. Remove the bolt, then remove the bracket.

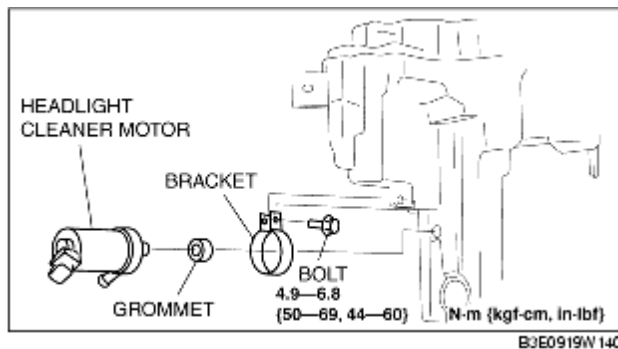

4. Remove the headlight cleaner motor, then remove the grommet.
5. Install in the reverse order of removal.