


HEADLIGHT CLEANER MOTOR INSPECTION

B3E091966122W07

1. Connect battery positive voltage to headlight cleaner motor terminal A and terminal B to ground.

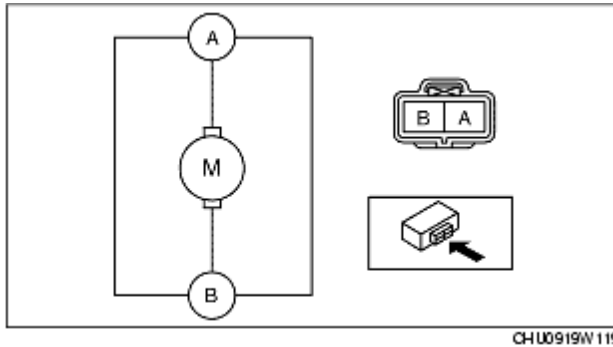

2. Verify that the headlight cleaner motor operates normally.
 - If there is any malfunction, replace the headlight cleaner motor.