

HEADLIGHT CLEANER NOZZLE REMOVAL

B3E091966122W09

1. Pull out the headlight cleaner nozzle.
2. While detaching the tab with a tape-wrapped flathead screwdriver, remove the headlight cleaner nozzle.

