


HEADLIGHT CLEANER HOSE REMOVAL/INSTALLATION

B3E091966122W11

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/INSTALLATION](#).)
3. Disconnect the headlight cleaner hose A from the joint pipe.

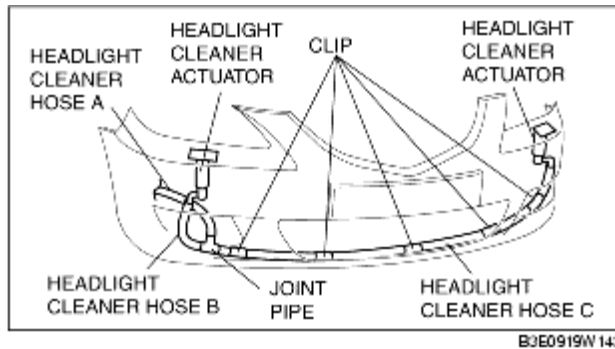

4. Disconnect the headlight cleaner hose B from the headlight cleaner actuator.
5. Disconnect the headlight cleaner hose C from the headlight cleaner actuator.
6. Remove the headlight cleaner hose C from the clips.
7. Disconnect the joint pipe, then remove the headlight cleaner hose B and C.
8. Install in the reverse order of removal.