


WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION

B3E091967320W01

1. Remove in the order indicated in the table.

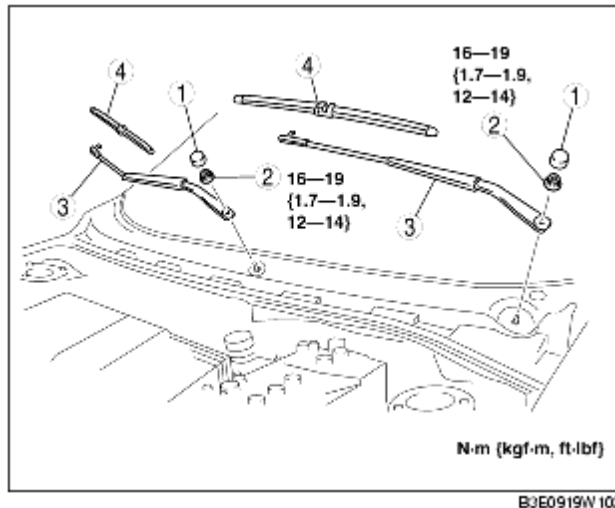

1	Cap
2	Nut
3	Windshield wiper arm (See Windshield Wiper Arm Installation Note.)
4	Windshield wiper blade

2. Install in the reverse order of removal.

3. Adjust the windshield wiper arm and blade. (See [WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT.](#))

Windshield Wiper Arm Installation Note

1. Clean the windshield wiper arm connector shafts using a wire brush before installing the windshield wiper arms.

