


# WINDSHIELD WIPER MOTOR REMOVAL/INSTALLATION

B3E091967340W01

1. Disconnect the negative battery cable.
2. Remove the windshield wiper arm and blade. (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION](#).)
3. Remove the cowl grille. (See [COWL GRILLE REMOVAL/INSTALLATION](#).)
4. Remove the cowl panel. (LHD) (See [COWL PANEL REMOVAL/INSTALLATION](#).)
5. Remove the bolts.

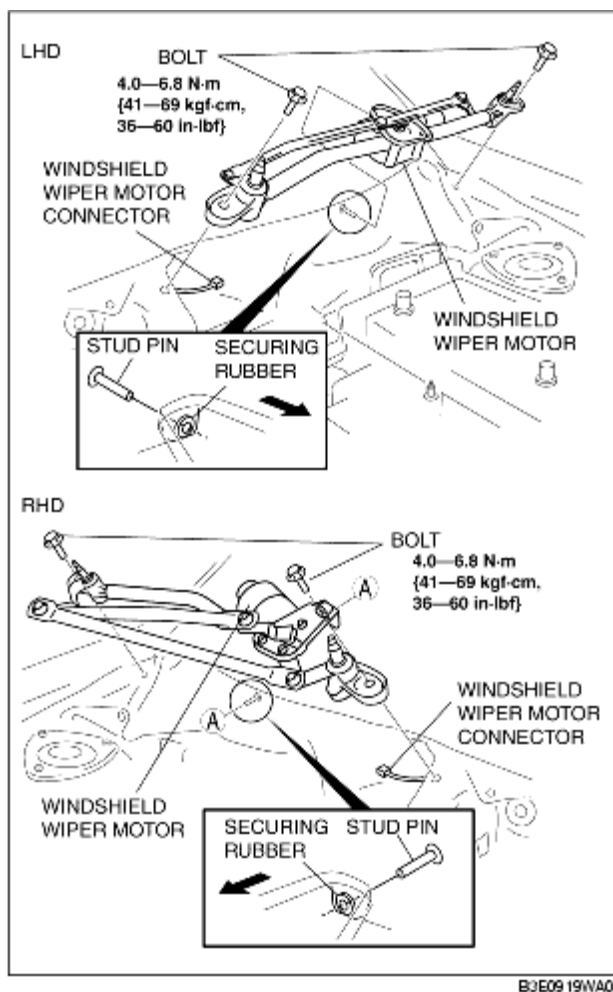

B3E0919WA01

6. Move the windshield wiper motor in the direction of the arrow, remove the securing rubber from the stud pin (for connecting the motor securing rubber), and then remove the windshield wiper motor.
7. Disconnect the windshield wiper motor connector.
8. Install in the reverse order of removal.