


WINDSHIELD WIPER MOTOR INSPECTION

B3E091967340W02

1. Disconnect the windshield wiper motor connector.
2. Connect battery positive voltage to windshield wiper motor terminal A or B, and ground to terminal D, then verify that the windshield wipers operate as shown in the table.

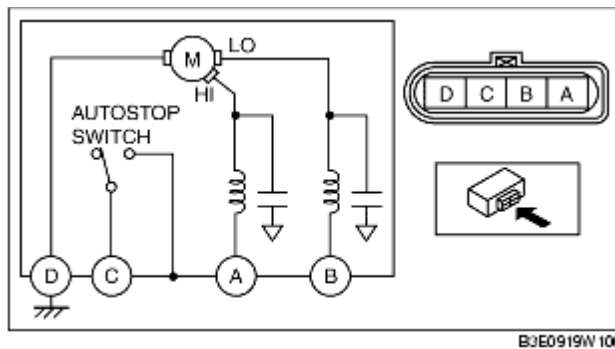

- If the windshield wipers do not operate as indicated in the table, replace the windshield wiper motor.

Terminal connected to battery positive voltage	Operation condition
A	HI
B	LO

B3E0919W 107