

WINDSHIELD WIPER LINK ASSEMBLY/DISASSEMBLY [R.H.D.]

B3E091967340W05


Disassembly

Note

- Do not replace link parts individually. If it is necessary to replace any part, replace the windshield wiper link as a single unit.

Assembly


1. Assemble in the order indicated in the table.

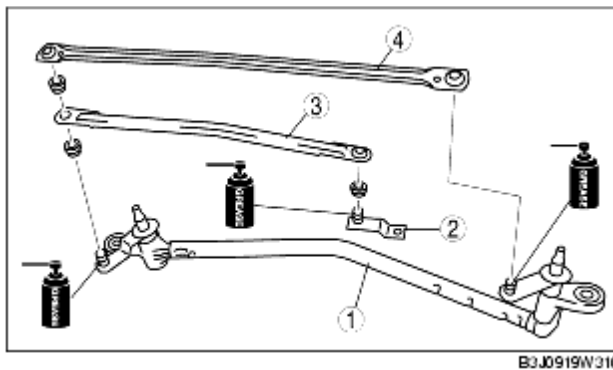

1	Main link (See Ball Joint Assembly Note.)
2	Motor crank (See Ball Joint Assembly Note.)
3	Wiper link No. 1 (See Ball Joint Assembly Note.)
4	Wiper link No. 2 (See Ball Joint Assembly Note.) (See Wiper Link No. 2 Assembly Note.)

Ball Joint Assembly Note

1. Use a clean rag to protect the link and squeeze using pliers.

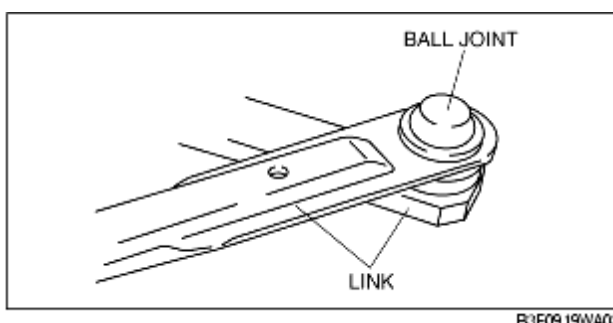

Wiper Link No. 2 Assembly Note

1. Assemble the wiper link No. 2 positioned as shown in the figure.

