


REAR WIPER ARM AND BLADE REMOVAL/INSTALLATION

B3E091967420W01

1. Remove in the order indicated in the table.

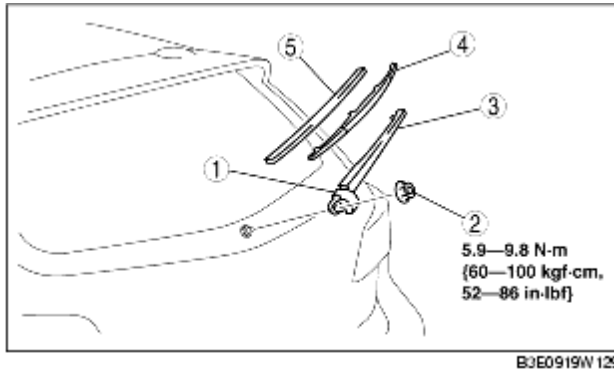

1	Cap
2	Nut
3	Rear wiper arm (See Rear Wiper Arm Installation Note.)
4	Rear wiper blade
5	Rubber brush

2. Install in the reverse order of removal.

3. Adjust the rear wiper arm and blade. (See [REAR WIPER ARM AND BLADE ADJUSTMENT.](#))

Rear Wiper Arm Installation Note

1. Clean the rear wiper arm connector shaft using a wire brush before installing the rear wiper arm.

