


REAR WIPER MOTOR REMOVAL/INSTALLATION

B3E091967450W01

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - (1) Rear wiper arm and blade (See [REAR WIPER ARM AND BLADE REMOVAL/INSTALLATION.](#))
 - (2) Liftgate upper trim (See [LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.](#))
 - (3) Liftgate side trim (See [LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.](#))
 - (4) Liftgate lower trim (See [LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.](#))
3. Disconnect the rear wiper motor connector.

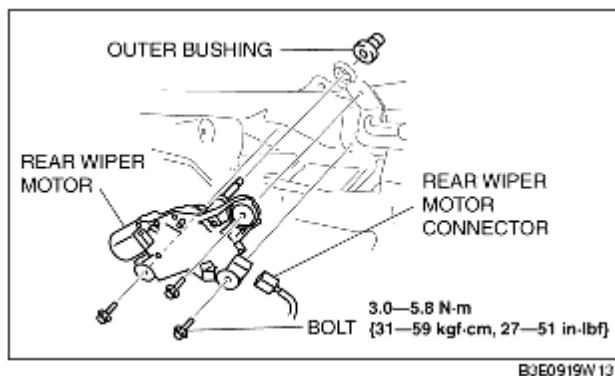

4. Remove the bolts, then remove the rear wiper motor.
5. Remove the outer bushing.
6. Install in the reverse order of removal.