


WINDSHIELD WASHER HOSE REMOVAL/INSTALLATION

B3E091967460W01

1. Remove the bonnet insulator. (See [BONNET REMOVAL/INSTALLATION](#).)
2. Slightly bend back the mudguard (RH).
3. Disconnect joint pipe A.

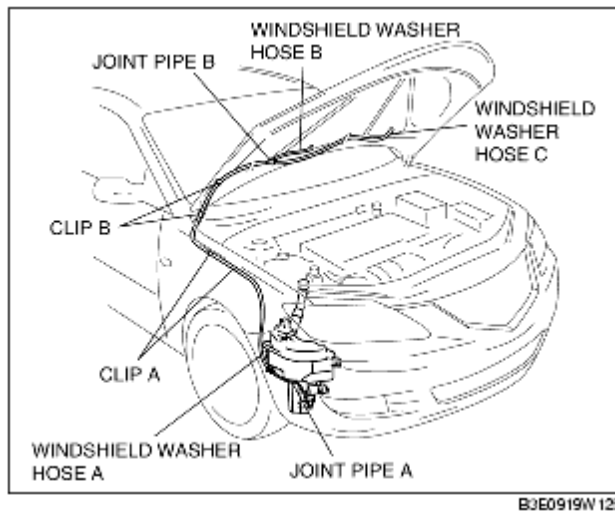

4. Remove windshield washer hose A from clips A.
5. Remove clips B.
6. Disconnect windshield washer hose B from the washer nozzle.
7. Disconnect windshield washer hose C from the washer nozzle.
8. Disconnect joint pipe B, then remove windshield washer hose A, B and C.
9. Install in the reverse order of removal.