


REAR WASHER HOSE REMOVAL/INSTALLATION

B3E091967470W01

1. Disconnect the negative battery cable.
2. Slightly bend back the mudguard (RH).
3. Disconnect the rear washer hose A from the washer tank.
4. Remove rear washer hose A from clips A.

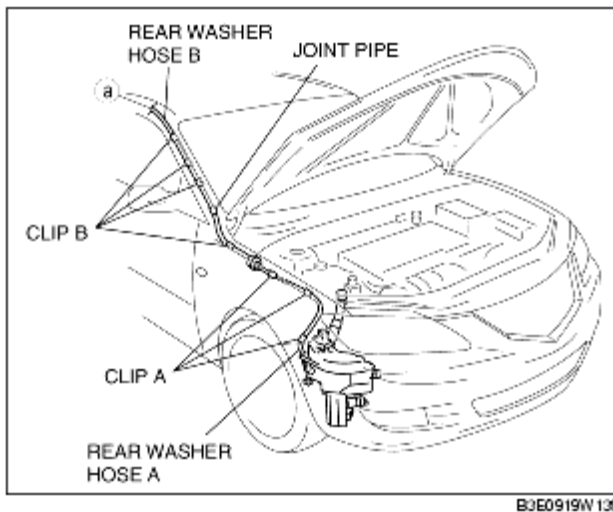

5. Remove A-pillar trim (RH). (See [A-PILLAR TRIM REMOVAL/INSTALLATION.](#))
6. Remove the glove compartment. (See [GLOVE COMPARTMENT REMOVAL/INSTALLATION](#))
7. Remove the dashboard garnish. (See [DASHBOARD GARNISH REMOVAL/INSTALLATION](#))
8. Disconnect joint pipe, then remove the rear washer hose A.
9. Remove rear washer hose B from the clips B.
10. Remove the following parts:
 - (1) Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/INSTALLATION.](#))
 - (2) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (3) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (4) B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.](#))
 - (5) B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.](#))
 - (6) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION.](#))
 - (7) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
 - (8) Trunk side upper trim (See [TRUNK SIDE UPPER TRIM REMOVAL/INSTALLATION.](#))
 - (9) C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION.](#))
 - (10) Map light (See [MAP LIGHT REMOVAL/INSTALLATION.](#))
 - (11) Interior light (See [INTERIOR LIGHT REMOVAL/INSTALLATION.](#))
 - (12) Sunvisor (See [SUNVISOR REMOVAL/INSTALLATION.](#))
 - (13) Assist handle (See [ASSIST HANDLE REMOVAL/INSTALLATION.](#))
11. Disconnect the joint pipe B.

12. Remove the headliner. (See [HEADLINER REMOVAL/INSTALLATION](#))
13. Remove rear washer hose B and the tapes.
14. Remove clips C from the body.
15. Disconnect the joint pipe C, then remove rear washer hose C.
16. Remove rear washer hose D from the rear washer nozzle.
17. Install in the reverse order of removal.