
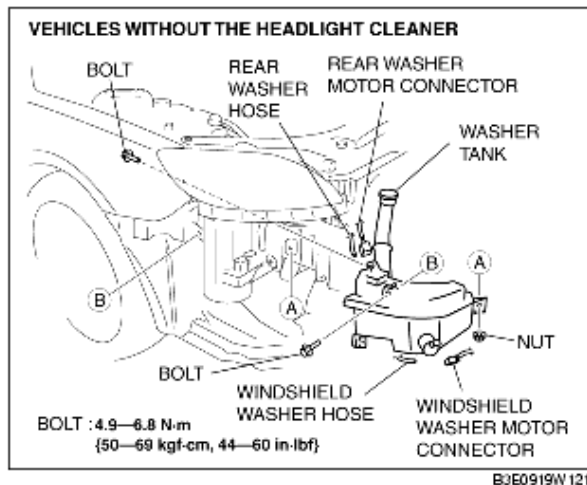


# WASHER TANK REMOVAL/INSTALLATION

B3E091967480W01

1. Disconnect the negative battery cable.
2. Remove the front bumper. (See [FRONT BUMPER REMOVAL/INSTALLATION](#).)
3. Disconnect the windshield washer motor connector and windshield washer hose.

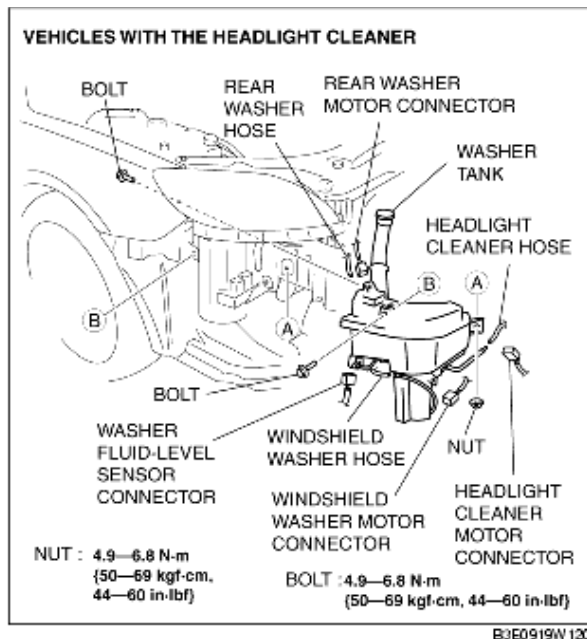

4. Disconnect the headlight cleaner motor connector and headlight cleaner hose. (Vehicles with the headlight cleaner)
5. Disconnect the rear washer motor connector and rear washer hose. (5HB)
6. Disconnect the washer fluid-level sensor connector. (Vehicles with the headlight cleaner)
7. Remove the bolts and nut, then remove the washer tank.
8. Install in the reverse order of removal.