


REAR WASHER NOZZLE REMOVAL/INSTALLATION

B3E091967511W01

1. Disconnect the negative battery cable.
2. Remove the liftgate upper trim. (See [LIFTGATE UPPER TRIM REMOVAL/INSTALLATION](#).)
3. Remove the high-mount brake light. (See [HIGH-MOUNT BRAKE LIGHT REMOVAL/INSTALLATION](#).)
4. Squeeze the tabs, then remove the rear washer nozzle.

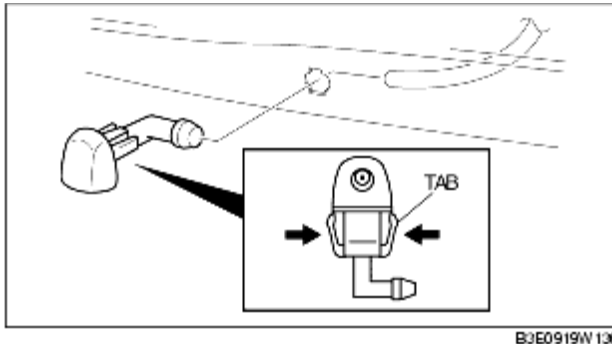

5. Install in the reverse order of removal.
6. Adjust the rear washer nozzle. (See [REAR WASHER NOZZLE ADJUSTMENT](#).)