


WINDSHIELD WASHER MOTOR REMOVAL/INSTALLATION

B3E091976670W01

1. Disconnect the negative battery cable.
2. Remove the washer tank. (See [WASHER TANK REMOVAL/INSTALLATION](#).)
3. Remove the windshield washer motor, then remove the grommet.

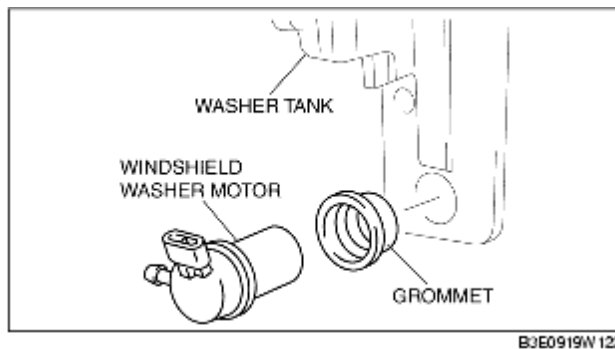

4. Install in the reverse order of removal.