


# WINDSHIELD WASHER MOTOR INSPECTION

---

B3E091976670W02

1. Connect battery positive voltage to windshield washer motor terminal A and terminal B to ground.

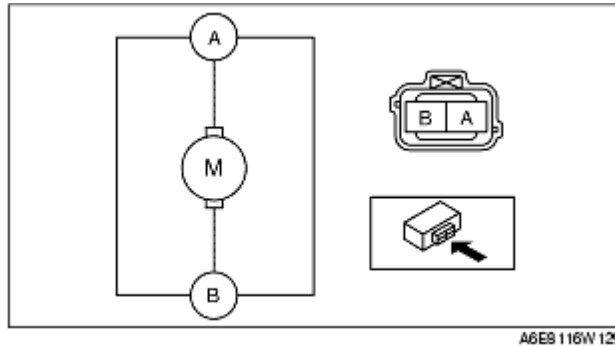

2. Verify that the windshield washer motor operates normally.
  - If there is any malfunction, replace the windshield washer motor.