


# REAR WASHER MOTOR REMOVAL/INSTALLATION

---

B3E091976672W01

1. Disconnect the negative battery cable.
2. Remove the washer tank. (See [WASHER TANK REMOVAL/INSTALLATION](#))
3. Remove the rear washer motor, then remove the grommet.

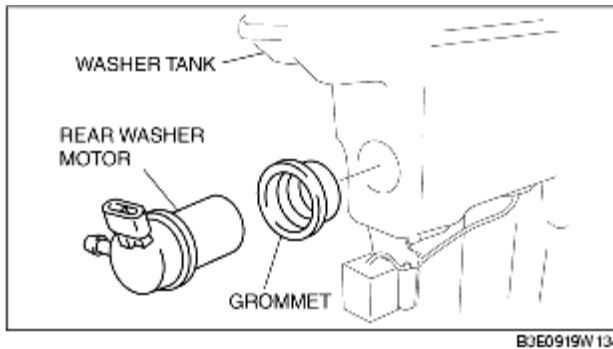

4. Install in the reverse order of removal.