

## REAR WASHER MOTOR INSPECTION

---

B3E091976672W02

1. Connect battery positive voltage to rear washer motor terminal A and terminal B to ground.
2. Verify that the rear washer motor operates normally.
  - If there is any malfunction, replace the rear washer motor.

